



QUICK REFERENCE

	Power On
	Booting (Flashing LED)
	Memory Check (Flashing LED)
	REC Ready (Flashing LED)
	REC Ready (PreRoll Active)
	REC Ready (Voice Activated)
	Recording (LED On)
	Stop / Capacity Check
	Each Flash equals 1 Hour
	Playing Back
	USB connected as Mass Storage Device
	Charging (Long Flash)
	USB Setup Mode On / Off
	USB connected in Setup Mode
	Battery Empty / Temp Excess
	SD Card full or missing
	Power Off